


August 31, 2017 **BLOG**

## XPure-S

### SYSTEM FOR SEPARATION, PURIFICATION, AND RECOVERY

The [XPure-S](#) SMB system offers a system for ion exchange processes with virtually unlimited scalability. The columns are not mounted on a carousel and the valve manifolds can be designed to allow very large hydraulic throughputs. This makes the system

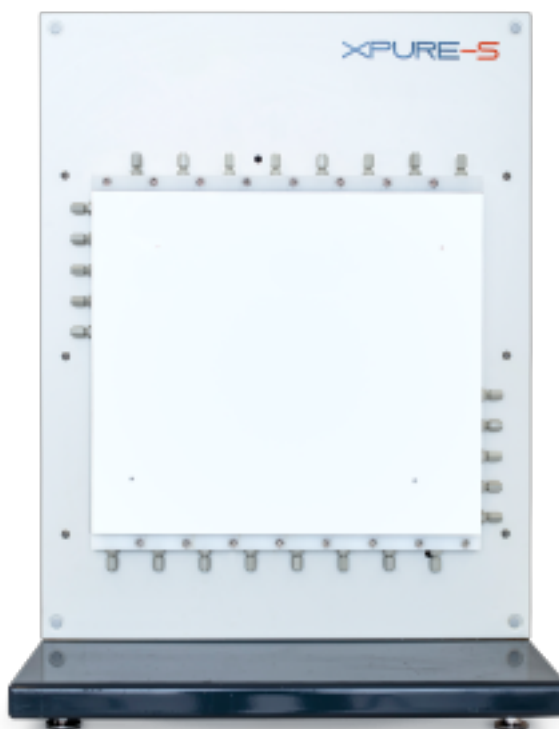

suitable for any scale of operation.

In addition to this, the modular design of the fluid distribution system allows an extension in a later stage without significant extra investments, by connecting additional valve manifolds and extra columns (and resin volume). This allows a stage-wise capacity extension of the plant without having to build an entirely new system.

[DOWNLOAD BROCHURE](#)